

Window XP (English)



300 Mbps Wireless Repeater

Model: REPW300



Quick Installation Guide

1 Packing List

- 1 x 300 Mbps wireless repeater
- 1 x network cable
- 1 x Instruction manual (CD)

2 Mode Introduction and Connection

Repeater Mode


It is recommended to use Repeater Mode. In Repeater mode the repeater expands wireless coverage of other existing repeater or wireless router. Computers can connect to the device in either a wired or wireless way.




To set up Repeater mode:

- Plug the repeater into the mains socket. Connect the repeat to a computer using the supplied network cable.
- Switch the Client/Repeater/AP button to Repeater.
- Click on the Internet access icon at the bottom right of your screen and then click to launch the Local Area Connection Status window.

- d. Click the Properties button.
- e. Click and highlight Internet Protocol (TCP/IP) and then click the Properties button.

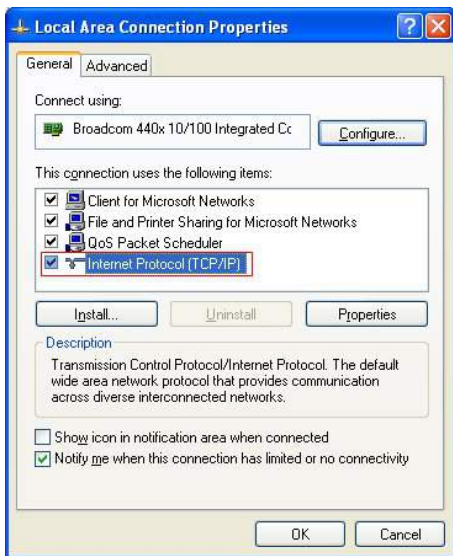

- f. Click to select Use the following IP address. Enter the IP address 192.168.100.X where X could be any number of 2-99. Click a field of Subnet mask, the subnet address should be created automatically.

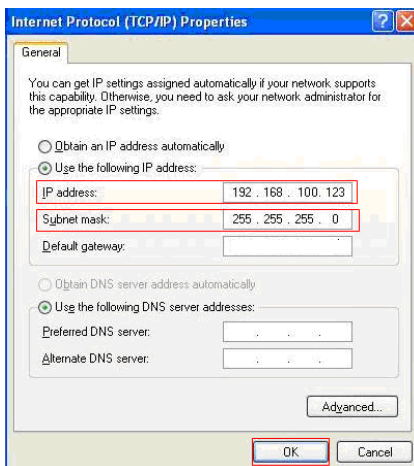

- g. Click OK to close the Internet Protocol (TCP/IP) Properties window.
- h. Open Internet Explorer and enter <http://192.168.100.253> to follow the repeater mode settings as described in the Repeat mode setting section.
- i. After set up close Internet Explorer.
- j. Repeat steps c to f above. Click to select Obtain an IP address automatically. Click OK and close the windows. The repeater mode should be able to set up.

Repeater mode setting

Follows the steps below to configure the repeater.

1. In the login window displayed below, enter the user name and password printed on the bottom label.



2. Click Login to enter the configuration page.
3. Click Setup Wizard in the navigation bar on the left pane of the page, select Wireless Universal Repeater Mode and click Next.

Setup Wizard

Step1: There are two modes to expand your wireless network of the Repeater Mode. You can choose anyone of WDS Mode or Wireless Universal Repeater Mode.

Please choose your repeater mode as follows:

- WDS Mode
- Wireless Universal Repeater Mode

Next

4. Click Site Survey to search for the wireless network you want to connect. Select a desired network and click Next.

Setup Wizard

Step2: Please configure the wireless client first. Click "Site Survey" button to survey wireless sites when client mode is enabled. If any Access Point or IBSS is found, the results will be displayed in the Site Survey List three seconds later, you could select anyone to connect it manually. Then click "Next".

Site Survey

Number of Sites Scanned:32

Site Survey List						
#	SSID	BSSID	Channel	Signal	Encrypt	Select
1	TW-2B08	00:1F:A4:91:2A:80	10	100%	WPA-PSK(AES/TKIP)/ WPA2-PSK(AES/TKIP)	<input checked="" type="radio"/>
2	Zoltrix_ZW919	00:28:12:34:56:78	1	100%	None	<input type="radio"/>
3	SMC	00:1F:A4:90:87:50	3	100%	WPA-PSK(AES/TKIP)/ WPA2-PSK(AES/TKIP)	<input type="radio"/>

Back

Next

5. Select a wireless Client Security option and then input a pass code. Click Next.

Setup Wizard

Step3: You should configure your wireless client manually so it has the same wireless security settings as the network which you selected. Then click "Next".

Wireless Client Security Options

Wireless Client Security Options : WPA2-PSK[AES] ▼

Security Options(WPA2-PSK)

PassPhrase : (8-63 characters or 64 hex digits)

Back

Next

6. Deselect Synchronize Wireless Universal Repeater's and Uplink repeater's SSID and Security Options and then select a security option. Click Finish to complete setup wizard.

Setup Wizard

Step4: This page provides an easy way to configure wireless universal repeater. If you enable the function, your wireless universal repeater would use same SSID and security options with uplink AP, or you should configure SSID of Extended Interface and Security Options manually. Finally click "Finish".

Wireless Universal Repeater Settings

Synchronize Wireless Universal Repeater's And Uplink AP's SSID And Security Options

SSID of Extended Interface :

Security Options :

Note: If you changed settings of wireless universal repeater, the wireless clients connecting to your wireless universal repeater need connect to wireless universal repeater with new SSID and security options again.

Back

Finish

Cancel

Window XP (European French)



Répéteur sans fil 300 Mbps

Modèle: REPW300



Guide rapide d'installation

1 Contenu de l'emballage

- 1 répéteur sans fil de 300 Mbps
- 1 câble réseau
- 1 x MODE D'EMPLOI (CD)

2 Introduction au mode et connexion

Mode répéteur

Il est recommandé d'utiliser le Mode répéteur. En mode répéteur, le répéteur étend la couverture sans fil des autres répéteurs ou routeurs sans fil existants. Les ordinateurs peuvent se connecter à l'appareil avec ou sans fil.




Appareils avec fonction Wi-Fi

Pour configurer le mode répéteur:


- a. Branchez le répéteur. Reliez le répéteur à un ordinateur à l'aide du câble réseau fourni.
- b. Mettez le bouton Client/Repeater/AP sur Repeater (répéteur).
- c. Cliquez sur l'icône d'accès à Internet située en bas à droite de l'écran, puis ouvrez la fenêtre Statut de la connexion au réseau local.

d. Cliquez sur Propriétés.

e. Cliquez sur Protocole Internet (TCP/IP) puis sur Propriétés.

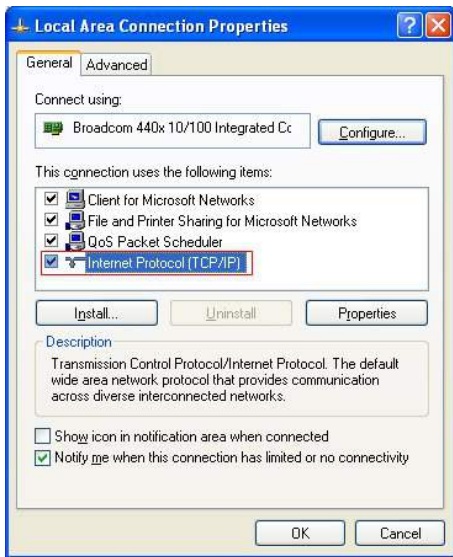

f. Sélectionnez Utiliser l'adresse IP suivante. Tapez l'adresse IP 192.168.100.X (X étant n'importe quel nombre de 2 à 99). Cliquez sur le champ d'un masque de sous-réseau; l'adresse de sous-réseau devrait être créée automatiquement.

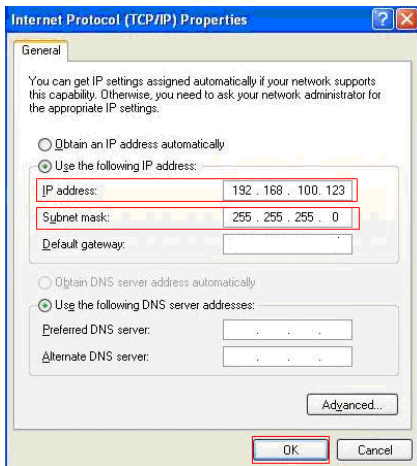

- g. Cliquez sur OK pour refermer la fenêtre Propriétés du protocole Internet (TCP/IP).
- h. Ouvrez Internet Explorer, allez à l'adresse <http://192.168.100.253> et suivez les indications de la section Réglages du mode répéteur.
- i. Une fois la configuration terminée, refermez Internet Explorer.
- j. Répétez les étapes c à f ci-dessus. Sélectionnez Obtenir une adresse IP automatiquement. Cliquez sur OK et refermez les fenêtres. Le mode répéteur devrait maintenant être configuré.

Réglage du mode de répétition

Pour configurer le répéteur, procédez de la manière suivante.

1. Dans la fenêtre d'ouverture de session ci-dessous, tapez le nom d'utilisateur et le mot de passe imprimés sur l'étiquette en-dessous.



2. Cliquez sur Login pour passer à la page de configuration.
3. Dans la partie gauche de la barre de navigation, cliquez sur Assistant de configuration; sélectionnez Mode répéteur sans fil universel et cliquez sur Suivant.

Setup Wizard

Step1: There are two modes to expand your wireless network of the Repeater Mode. You can choose anyone of WDS Mode or Wireless Universal Repeater Mode.

Please choose your repeater mode as follows:

WDS Mode

Wireless Universal Repeater Mode

Next

4. Cliquez sur Étude de sites pour rechercher le réseau sans fil auquel vous souhaitez vous connecter. Choisissez un réseau et cliquez sur Suivant.

Setup Wizard

Step2: Please configure the wireless client first. Click "Site Survey" button to survey wireless sites when client mode is enabled. If any Access Point or IBSS is found, the results will be displayed in the Site Survey List three seconds later, you could select anyone to connect it manually. Then click "Next".

Site Survey

Number of Sites Scanned:32

Site Survey List						
#	SSID	BSSID	Channel	Signal	Encrypt	Select
1	TW-2B08	00:1F:A4:91:2A:80	10	100%	WPA-PSK(AES/TKIP)/ WPA2-PSK(AES/TKIP)	<input checked="" type="radio"/>
2	Zoltrix_ZW919	00:28:12:34:56:78	1	100%	None	<input type="radio"/>
3	SMC	00:1F:A4:90:87:50	3	100%	WPA-PSK(AES/TKIP)/ WPA2-PSK(AES/TKIP)	<input type="radio"/>

Back

Next

5. Choisissez une option de sécurité de client sans fil, puis définissez un mot de passe. Cliquez sur Suivant.

Setup Wizard

Step3: You should configure your wireless client manually so it has the same wireless security settings as the network which you selected. Then click "Next".

Wireless Client Security Options

Wireless Client Security Options : WPA2-PSK[AES]

Security Options(WPA2-PSK)

PassPhrase : (8-63 characters or 64 hex digits)

Back

Next

6. Désélectionnez Synchroniser le SSID et les options de sécurité du répéteur sans fil universel et du répéteur de liaison montante, puis sélectionnez une option de sécurité.

Cliquez sur Terminer pour refermer l'assistant de configuration.

Setup Wizard

Step4: This page provides an easy way to configure wireless universal repeater. If you enable the function, your wireless universal repeater would use same SSID and security options with uplink AP, or you should configure SSID of Extended Interface and Security Options manually. Finally click "Finish".

Wireless Universal Repeater Settings

Synchronize Wireless Universal Repeater's And Uplink AP's SSID And Security Options

SSID of Extended Interface : ITWORKS

Security Options : none

Note: If you changed settings of wireless universal repeater, the wireless clients connecting to your wireless universal repeater need connect to wireless universal repeater with new SSID and security options again.

Back

Finish

Cancel

Window XP (DUTCH)



300 Mbps draadloze repeater

Model: REPW300



Gids voor een snelle installatie


1 Paklijst

- 1 x 300 Mbps draadloze repeater
- 1 x netwerkkabel
- 1 x HANDLEIDING (CD)

2 Inleiding over modi en verbinding

Repeater-modus


Het is aanbevolen de Repeater-modus te gebruiken. In de Repeater-modus breidt de repeater de draadloze dekking van een andere, bestaande repeater of een draadloze router uit. Computers kunnen met of zonder kabel op het apparaat worden aangesloten.

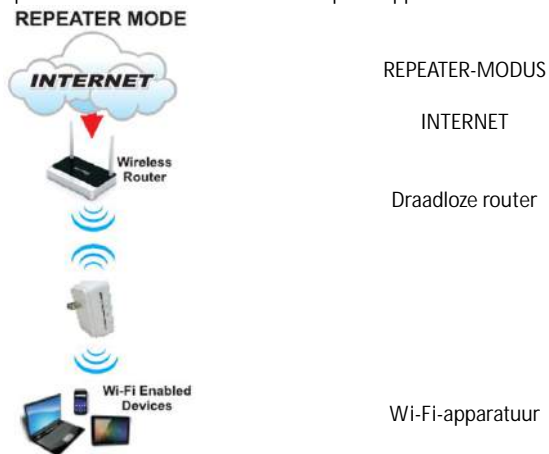


Om de repeater-modus in te stellen:

- a. Sluit de repeater aan op een stopcontact. Sluit de repeater aan op een computer met behulp van de meegeleverde netwerkkabel.
- b. Schakel de knop Cliënt/Repeater/AP naar Repeater.
- c. Klik op het icoon van de internettoegang rechtsonder op uw scherm en klik dan om het venster van de Lokale verbindingstatus te openen.

- d. Klik op de button Eigenschappen.
- e. Klik en highlight Internet Protocol (TCP/IP) en klik dan op de button Eigenschappen.

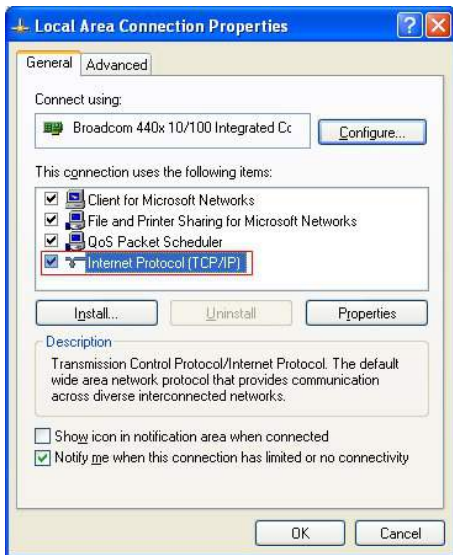

- f. Klik om Gebruik het volgende IP-adres te selecteren. Voer het IP-adres 192.168.100.X in, waarbij X een cijfer van 2-99 kan zijn. Klik op een veld van een Subnetmask, het subnet-adres zou automatisch gegeneerd moeten worden.

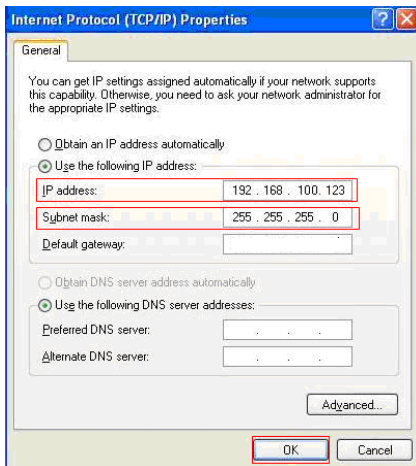

- g. Klik op OK om het venster van de Internet Protocol (TCP/IP) Eigenschappen te sluiten.
- h. Open Internet Explorer en ga naar <http://192.168.100.253> om de instellingen van de repeater-modus te volgen, als beschreven in de paragraaf Instellen van de repeat-modus.
- i. Sluit Internet Explorer als de instelling is voltooid.
- j. Herhaal de bovenstaande stappen c tot g. Klik om Verkrijg automatisch een IP-adres te selecteren. Klik op OK en sluit de vensters. De repeater-modus kan nu worden ingesteld.

De repeater-modus instellen

Volg de onderstaande stappen om de repeater te configureren.

1. Voer als hieronder getoond in het aanmeldvenster de gebruikersnaam en het paswoord in die u vindt op het typeplaatje op de onderzijde.



2. Klik op Aanmelden om de configuratiepagina binnen te gaan.
3. Klik op Instel-wizard in de navigatiebalk op het linkerpaneel van de pagina, selecteer Draadloze universele repeater-modus en klik op Volgende.

Setup Wizard

Step1: There are two modes to expand your wireless network of the Repeater Mode. You can choose anyone of WDS Mode or Wireless Universal Repeater Mode.

Please choose your repeater mode as follows:

WDS Mode

Wireless Universal Repeater Mode

Next

4. Klik op Site survey om te zoeken naar het draadloze netwerk waarmee u wilt verbinden. Selecteer het gewenste netwerk en klik op Volgende.

Setup Wizard

Step2: Please configure the wireless client first. Click "Site Survey" button to survey wireless sites when client mode is enabled. If any Access Point or IBSS is found, the results will be displayed in the Site Survey List three seconds later, you could select anyone to connect it manually. Then click "Next".

Site Survey

Number of Sites Scanned:32

Site Survey List						
#	SSID	BSSID	Channel	Signal	Encrypt	Select
1	TW-2B08	00:1F:A4:91:2A:80	10	100%	WPA-PSK(AES/TKIP)/ WPA2-PSK(AES/TKIP)	<input checked="" type="radio"/>
2	Zoltrix_ZW919	00:28:12:34:56:78	1	100%	None	<input type="radio"/>
3	SMC	00:1F:A4:90:87:50	3	100%	WPA-PSK(AES/TKIP)/ WPA2-PSK(AES/TKIP)	<input type="radio"/>

Back Next

5. Selecteer een beveiligingsoptie voor de draadloze cliënt en voer dan een wachtwoord in. Klik op Volgende.

Setup Wizard

Step3: You should configure your wireless client manually so it has the same wireless security settings as the network which you selected. Then click "Next".

Wireless Client Security Options

Wireless Client Security Options : WPA2-PSK[AES]

Security Options(WPA2-PSK)

PassPhrase : (8-63 characters or 64 hex digits)

Back Next

6. Deselecteer Synchroniseer opties van de draadloze universele repeater en uplink SSID en beveiligingsoptie van repeater en selecteer dan een beveiligingsoptie. Klik op Voltooiën om de instel-wizard te verlaten.

Setup Wizard

Step4: This page provides an easy way to configure wireless universal repeater. If you enable the function, your wireless universal repeater would use same SSID and security options with uplink AP, or you should configure SSID of Extended Interface and Security Options manually. Finally click "Finish".

Wireless Universal Repeater Settings

Synchronize Wireless Universal Repeater's And Uplink AP's SSID And Security Options

SSID of Extended Interface : ITWORKS

Security Options : none

Note: If you changed settings of wireless universal repeater, the wireless clients connecting to your wireless universal repeater need connect to wireless universal repeater with new SSID and security options again.

Back Finish Cancel

Window 7 (English)



300 Mbps Wireless Repeater

Model: REPW300



Quick Installation Guide

1 Packing List

- 1 x 300 Mbps wireless repeater
- 1 x network cable
- 1 x Instruction manual (CD)

2 Mode Introduction and Connection

Repeater Mode

It is recommended to use Repeater Mode. In Repeater mode the repeater expands wireless coverage of other existing repeater or wireless router. Computers can connect to the device in either a wired or wireless way.




To set up Repeater mode:

- Plug the repeater into the mains socket. Connect the repeat to a computer using the supplied network cable.
- Switch the Client/Repeater/AP button to Repeater.
- Click on the Internet access icon at the bottom right of your screen and then click to select Open Network and Sharing Center.




d. Click Change adapter setting on the left portion of the Window.

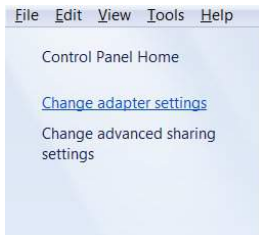

e. Double click the icon for the Internet connection you are using. Often this will be labelled with "Local Area Connection" or the name of your ISP. If you have multiple connections, make sure not to click the one with the red X.

f. Click the Properties button. Click and highlight Internet Protocol Version 4 (TCP/IPv4) and then click Properties.

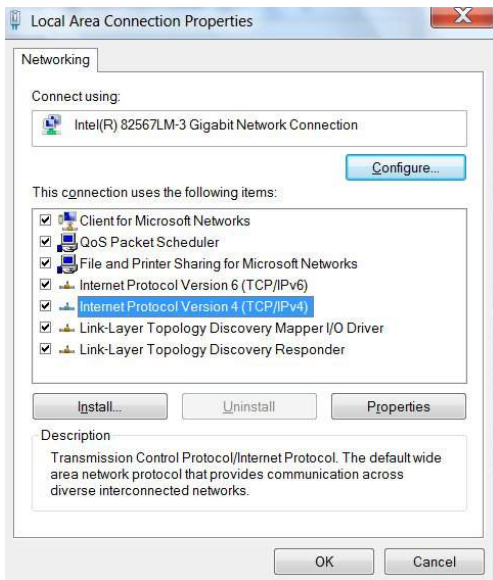

- g. Click to select Use the following IP address. Enter the IP address 192.168.100.X where X could be any number of 2-99. Click a field of Subnet mask, the subnet address should be created automatically.

Internet Protocol Version 4 (TCP/IPv4) Properties

General

You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.

Obtain an IP address automatically

Use the following IP address:

IP address: 192 . 168 . 100 . 2

Subnet mask: 255 . 255 . 255 . 0

Default gateway: . . .

Obtain DNS server address automatically

Use the following DNS server addresses

Preferred DNS server: . . .

Alternate DNS server: . . .

Validate settings upon exit

Advanced...

OK Cancel

- h. Click OK to close the Internet Protocol Version 4 (TCP/IPv4) Properties window.
- i. Open Internet Explorer and enter <http://192.168.100.253> to follow the repeater mode settings as described in the Repeat mode setting section.
- j. After set up close Internet Explorer.
- k. Repeat steps c to g above. Click to select Obtain an IP address automatically. Click OK and close the windows. The repeater mode should be able to set up.

Internet Protocol Version 4 (TCP/IPv4) Properties

General Alternate Configuration

You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.

Obtain an IP address automatically

Use the following IP address:

IP address: . . .

Subnet mask: . . .

Default gateway: . . .

Obtain DNS server address automatically

Use the following DNS server addresses

Preferred DNS server: . . .

Alternate DNS server: . . .

Validate settings upon exit

Advanced...

Repeater mode setting

Follows the steps below to configure the repeater.

1. In the login window displayed below, enter the user name and password printed on the bottom label.



The login window features a blue header with the 'it.WORKS' logo. Below the header, there is a language selection dropdown menu currently set to 'English'. Underneath are two input fields for 'Username:' and 'Password:'. At the bottom of the form are two buttons: 'Login' and 'Reset'.

2. Click Login to enter the configuration page.
3. Click Setup Wizard in the navigation bar on the left pane of the page, select Wireless Universal Repeater Mode and click Next.

Setup Wizard

Step1: There are two modes to expand your wireless network of the Repeater Mode. You can choose anyone of WDS Mode or Wireless Universal Repeater Mode.

Please choose your repeater mode as follows:

- WDS Mode
- Wireless Universal Repeater Mode

Next

4. Click Site Survey to search for the wireless network you want to connect. Select a desired network and click Next.

Setup Wizard

Step2: Please configure the wireless client first. Click "Site Survey" button to survey wireless sites when client mode is enabled. If any Access Point or IBSS is found, the results will be displayed in the Site Survey List three seconds later, you could select anyone to connect it manually. Then click "Next".

Site Survey

Number of Sites Scanned:32

#	SSID	BSSID	Channel	Signal	Encrypt	Select
1	TW-2B08	00:1F:A4:91:2A:60	10	100%	WPA-PSK(AES/TKIP)/ WPA2-PSK(AES/TKIP)	<input checked="" type="radio"/>
2	Zoltrix_ZW919	00:28:12:34:56:78	1	100%	None	<input type="radio"/>
3	SMC	00:1F:A4:90:87:50	3	100%	WPA-PSK(AES/TKIP)/ WPA2-PSK(AES/TKIP)	<input type="radio"/>

Back Next

5. Select a wireless Client Security option and then input a pass code. Click Next.

Setup Wizard

Step3: You should configure your wireless client manually so it has the same wireless security settings as the network which you selected. Then click "Next".

Wireless Client Security Options

Wireless Client Security Options : WPA2-PSK[AES] ▼

Security Options(WPA2-PSK)

PassPhrase : (8-63 characters or 64 hex digits)

6. Deselect Synchronize Wireless Universal Repeater's and Uplink repeater's SSID and Security Options and then select a security option. Click Finish to complete setup wizard.

Setup Wizard

Step4: This page provides an easy way to configure wireless universal repeater. If you enable the function, your wireless universal repeater would use same SSID and security options with uplink AP, or you should configure SSID of Extended Interface and Security Options manually. Finally click "Finish".

Wireless Universal Repeater Settings

Synchronize Wireless Universal Repeater's And Uplink AP's SSID And Security Options

SSID of Extended Interface :

Security Options : ▼

Note: If you changed settings of wireless universal repeater, the wireless clients connecting to your wireless universal repeater need connect to wireless universal repeater with new SSID and security options again.

Window 7 (European French)

Répéteur sans fil 300 Mbps

Modèle: REPW300



Guide rapide d'installation

1 Contenu de l'emballage

- 1 répéteur sans fil de 300 Mbps
- 1 câble réseau
- 1 x MODE D'EMPLOI (CD)

2 Introduction au mode et connexion

Mode répéteur

Il est recommandé d'utiliser le Mode répéteur. En mode répéteur, le répéteur étend la couverture sans fil des autres répéteurs ou routeurs sans fil existants. Les ordinateurs peuvent se connecter à l'appareil avec ou sans fil.




Appareils avec fonction Wi-Fi

Pour configurer le mode répéteur:


- a. Branchez le répéteur. Reliez le répéteur à un ordinateur à l'aide du câble réseau fourni.
- b. Mettez le bouton Client/Repeater/AP sur Repeater (répéteur).
- c. Cliquez sur l'icône d'accès à Internet située en bas à droite de l'écran, puis sélectionnez Ouvrir le Centre Réseau et partage.




- d. Cliquez sur **Changer les paramètres de l'adaptateur** dans la partie gauche de la fenêtre.

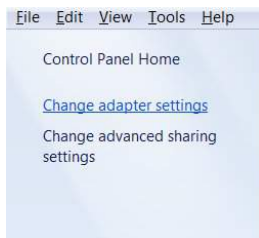


- e. Faites un double clic sur l'icône de la connexion Internet utilisée. Cette icône porte en général le nom de "Connexion au réseau local", ou le nom de votre ISP. Si vous avez plusieurs connexions, ne cliquez pas sur celle avec un X rouge.
- f. Cliquez sur **Propriétés**. Cliquez sur **Protocole Internet version 4 (TCP/IPv4)** puis sur **Propriétés**.

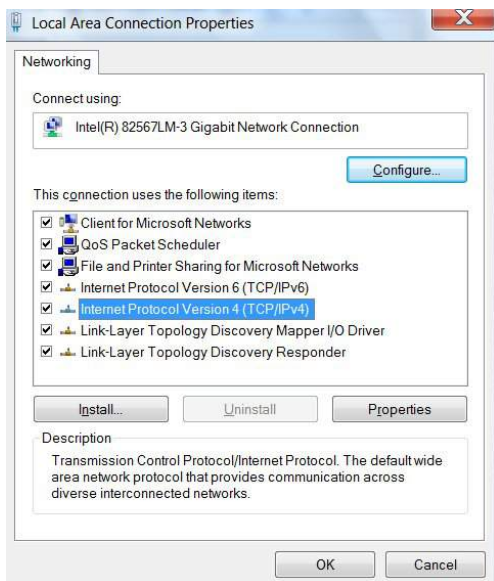

- g. Sélectionnez Utiliser l'adresse IP suivante. Tapez l'adresse IP 192.168.100.X (X étant n'importe quel nombre de 2 à 99). Cliquez sur le champ d'un masque de sous-réseau; l'adresse de sous-réseau devrait être créée automatiquement.

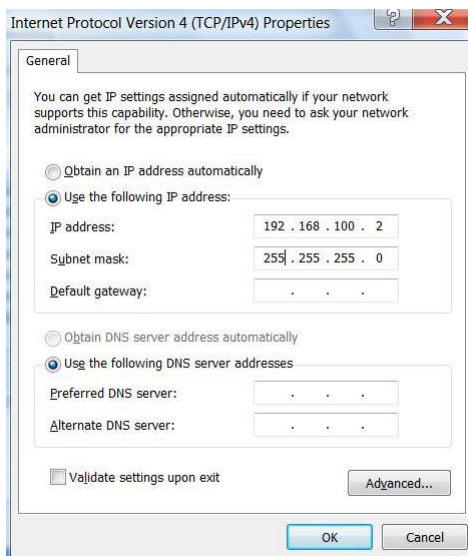

- h. Cliquez sur OK pour refermer la fenêtre Propriétés du protocole Internet version 4 (TCP/IPv4).
- i. Ouvrez Internet Explorer, allez à l'adresse <http://192.168.100.253> et suivez les indications de la section Réglages du mode répéteur.
- j. Une fois la configuration terminée, refermez Internet Explorer.
- k. Répétez les étapes c à g ci-dessus. Sélectionnez Obtenir une adresse IP automatiquement. Cliquez sur OK et refermez les fenêtres. Le mode répéteur devrait maintenant être configuré.

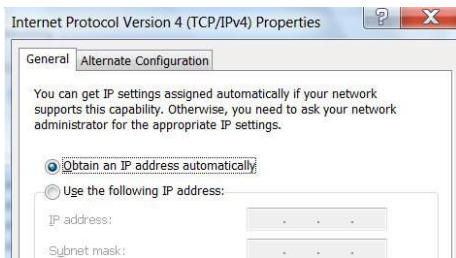

Réglage du mode de répétition

Pour configurer le répéteur, procédez de la manière suivante.

1. Dans la fenêtre d'ouverture de session ci-dessous, tapez le nom d'utilisateur et le mot de passe imprimés sur l'étiquette en-dessous.



The image shows a login interface for 'it.WORKS'. At the top, there is a blue header with the 'it.WORKS' logo. Below the header, there is a form with the following elements: a 'Language:' dropdown menu set to 'English', a 'Username:' text input field, a 'Password:' text input field, and two buttons labeled 'Login' and 'Reset'.

2. Cliquez sur Login pour passer à la page de configuration.
3. Dans la partie gauche de la barre de navigation, cliquez sur Assistant de configuration; sélectionnez Mode répéteur sans fil universel et cliquez sur Suivant.

Setup Wizard

Step 1: There are two modes to expand your wireless network of the Repeater Mode. You can choose anyone of WDS Mode or Wireless Universal Repeater Mode.

Please choose your repeater mode as follows:

WDS Mode

Wireless Universal Repeater Mode

Next

4. Cliquez sur Étude de sites pour rechercher le réseau sans fil auquel vous souhaitez vous connecter. Choisissez un réseau et cliquez sur Suivant.

Setup Wizard

Step2: Please configure the wireless client first. Click "Site Survey" button to survey wireless sites when client mode is enabled. If any Access Point or IBSS is found, the results will be displayed in the Site Survey List three seconds later, you could select anyone to connect manually. Then click "Next".

Site Survey

Number of Sites Scanned:32

Site Survey List						
#	SSID	BSSID	Channel	Signal	Encrypt	Select
1	TW-2B08	00:1F:A4:91:2A:60	10	100%	WPA-PSK(AES/TKIP) WPA2-PSK(AES/TKIP)	<input checked="" type="radio"/>
2	Zoltrix_ZW919	00:28:12:34:56:78	1	100%	None	<input type="radio"/>
3	SMC	00:1F:A4:90:87:50	3	100%	WPA-PSK(AES/TKIP) WPA2-PSK(AES/TKIP)	<input type="radio"/>

Back Next

5. Choisissez une option de sécurité de client sans fil, puis définissez un mot de passe. Cliquez sur Suivant.

Setup Wizard

Step3: You should configure your wireless client manually so it has the same wireless security settings as the network which you selected. Then click "Next".

Wireless Client Security Options

Wireless Client Security Options : WPA2-PSK[AES] ▼

Security Options(WPA2-PSK)

PassPhrase : (8-63 characters or 64 hex digits)

Back Next

6. Désélectionnez Synchroniser le SSID et les options de sécurité du répéteur sans fil universel et du répéteur de liaison montante, puis sélectionnez une option de sécurité. Cliquez sur Terminer pour refermer l'assistant de configuration.

Setup Wizard

Step4: This page provides an easy way to configure wireless universal repeater. If you enable the function, your wireless universal repeater would use same SSID and security options with uplink AP, or you should configure SSID of Extended Interface and Security Options manually. Finally click "Finish".

Wireless Universal Repeater Settings

Synchronize Wireless Universal Repeater's And Uplink AP's SSID And Security Options

SSID of Extended Interface :

Security Options :

Note: If you changed settings of wireless universal repeater, the wireless clients connecting to your wireless universal repeater need connect to wireless universal repeater with new SSID and security options again.

Back Finish Cancel

Window 7 (DUTCH)



300 Mbps draadloze repeater

Model: REPW300



Gids voor een snelle installatie


1 Paklijst

- 1 x 300 Mbps draadloze repeater
- 1 x netwerkkabel
- 1 x HANDLEIDING (CD)

2 Inleiding over modi en verbinding

Repeater-modus

Het is aanbevolen de Repeater-modus te gebruiken. In de Repeater-modus breidt de repeater de draadloze dekking van een andere, bestaande repeater of een draadloze router uit. Computers kunnen met of zonder kabel op het apparaat worden aangesloten.

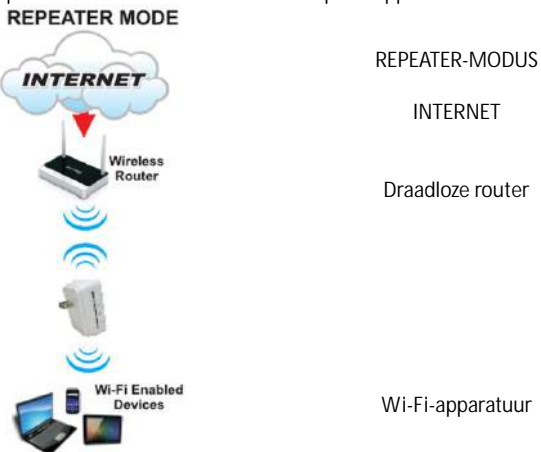


Om de repeater-modus in te stellen:

- Sluit de repeater aan op een stopcontact. Sluit de repeater aan op een computer met behulp van de meegeleverde netwerkkabel.
- Schakel de knop Cliënt/Repeater/AP naar Repeater.
- Klik op het icoon van de internettoegang rechtsonder op uw scherm en klik dan om Open netwerk en sharing centrum te selecteren.




d. Klik op Adapterinstellingen wijzigen op het linker gedeelte van het scherm.

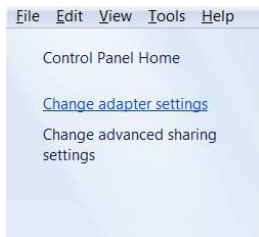


e. Dubbelklik op het icoon van de internetverbinding die u gebruikt. Deze draagt vaak het label "Plaatselijke verbinding" of de naam van uw ISP. Als u meerdere verbindingen heeft, mag u zeker niet deze met een rode X aanklikken.


f. Klik op de button Eigenschappen. Klik en highlight Internet Protocol Versie 4 (TCP/IPv4) en klik dan op Eigenschappen.

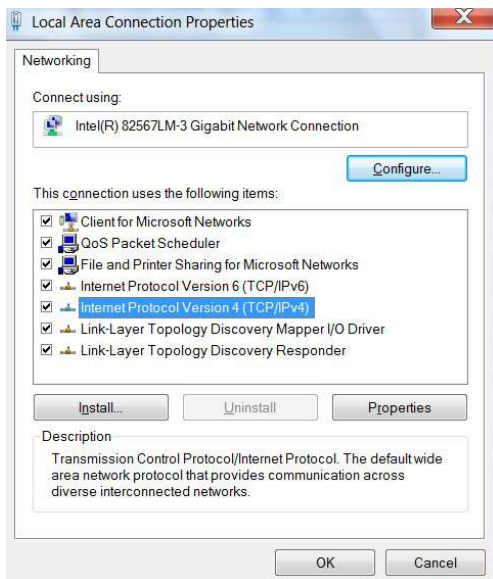

- g. Klik om Gebruik het volgende IP-adres te selecteren. Voer het IP-adres 192.168.100.X in, waarbij X een cijfer van 2-99 kan zijn. Klik op een veld van een Subnetmask, het subnet-adres zou automatisch gegenereerd moeten worden.

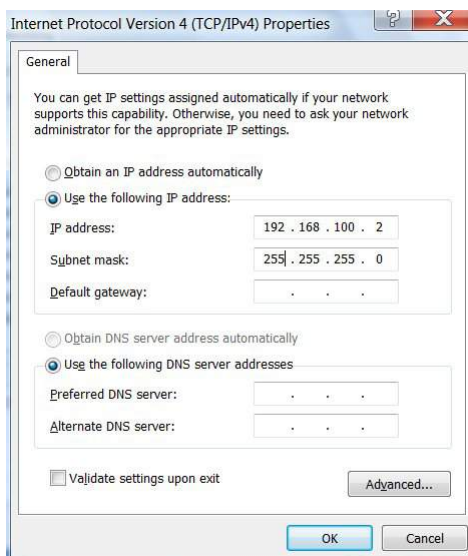

- h. Klik op OK om het venster van de Internet Protocol Versie 4 (TCP/IPv4) Eigenschappen te sluiten.
- i. Open Internet Explorer en ga naar <http://192.168.100.253> om de instellingen van de repeater-modus te volgen, als beschreven in de paragraaf Instellen van de repeat-modus.
- j. Sluit Internet Explorer als de instelling is voltooid.
- k. Herhaal de bovenstaande stappen c tot g. Klik om Verkrijg automatisch een IP-adres te selecteren. Klik op OK en sluit de vensters. De repeater-modus kan nu worden ingesteld.

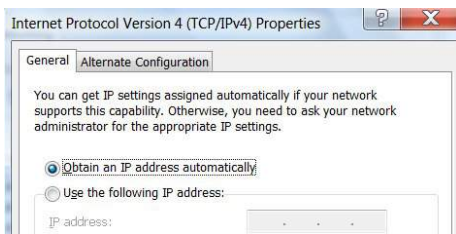

De repeater-modus instellen

Volg de onderstaande stappen om de repeater te configureren.

1. Voer als hieronder getoond in het aanmeldvenster de gebruikersnaam en het paswoord in die u vindt op het typeplaatje op de onderzijde.



Figuur 1

2. Klik op Aanmelden om de configuratiepagina binnen te gaan.
3. Klik op Instel-wizard in de navigatiebalk op het linkerpaneel van de pagina, selecteer Draadloze universele repeater-modus en klik op Volgende.

Setup Wizard

Step1: There are two modes to expand your wireless network of the Repeater Mode. You can choose anyone of WDS Mode or Wireless Universal Repeater Mode.

Please choose your repeater mode as follows:

WDS Mode

Wireless Universal Repeater Mode

Next

4. Klik op Site survey om te zoeken naar het draadloze netwerk waarmee u wilt verbinden. Selecteer het gewenste netwerk en klik op Volgende.

Setup Wizard

Step2: Please configure the wireless client first. Click "Site Survey" button to survey wireless sites when client mode is enabled. If any Access Point or IBSS is found, the results will be displayed in the Site Survey List three seconds later, you could select anyone to connect it manually. Then click "Next".

Site Survey

Number of Sites Scanned:32

Site Survey List						
#	SSID	BSSID	Channel	Signal	Encrypt	Select
1	TW-2B08	00:1F:A4:91:2A:60	10	100%	WPA-PSK(AES/TKIP) WPA2-PSK(AES/TKIP)	<input checked="" type="radio"/>
2	Zoltrix_ZW919	00:28:12:34:56:78	1	100%	None	<input type="radio"/>
3	SMC	00:1F:A4:90:87:50	3	100%	WPA-PSK(AES/TKIP) WPA2-PSK(AES/TKIP)	<input type="radio"/>

Back Next

5. Selecteer een beveiligingsoptie voor de draadloze cliënt en voer dan een wachtwoord in. Klik op Volgende.

Setup Wizard

Step3: You should configure your wireless client manually so it has the same wireless security settings as the network which you selected. Then click "Next".

Wireless Client Security Options

Wireless Client Security Options : WPA2-PSK[AES] ▼

Security Options(WPA2-PSK)

PassPhrase : (8-63 characters or 64 hex digits)

Back Next

6. Deselecteer Synchroniseer opties van de draadloze universele repeater en uplink SSID en beveiligingsoptie van repeater en selecteer dan een beveiligingsoptie. Klik op Voltooiën om de instel-wizard te verlaten.

Setup Wizard

Step4: This page provides an easy way to configure wireless universal repeater. If you enable the function, your wireless universal repeater would use same SSID and security options with uplink AP, or you should configure SSID of Extended Interface and Security Options manually. Finally click "Finish".

Wireless Universal Repeater Settings

Synchronize Wireless Universal Repeater's And Uplink AP's SSID And Security Options

SSID of Extended Interface :

Security Options :

Note: If you changed settings of wireless universal repeater, the wireless clients connecting to your wireless universal repeater need connect to wireless universal repeater with new SSID and security options again.

Back Finish Cancel

Mac OS (English)



300 Mbps Wireless Repeater

Model: REPW300



Quick Installation Guide

1 Packing List

- 1 x 300 Mbps wireless repeater
- 1 x network cable
- 1 x Instruction manual (CD)


2 Mode Introduction and Connection

Repeater Mode

It is recommended to use Repeater Mode. In Repeater mode the repeater expands wireless coverage of other existing repeater or wireless router. Computers can connect to the device in either a wired or wireless way.




To set up Repeater mode:

- Plug the repeater into the mains socket. Connect the repeat to a computer using the supplied network cable.
- Switch the Client/Repeater/AP button to Repeater.
- Click  icon on the upper left corner to launch the menu. Click System Preferences to launch the System Preferences window.




d. Click the Network icon to launch the Network window.

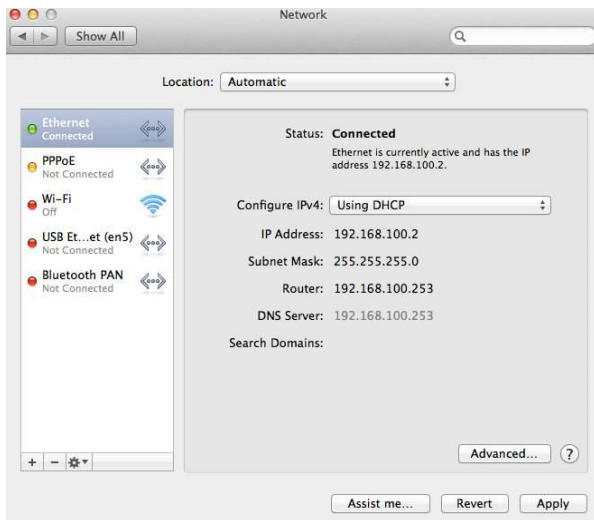


By default the automatic wired connection is Ethernet DHCP. If DHCP is enabled you can use this connection without IP address configuration. If DHCP is disabled, you have to configure the IP address manually.

e. Enter the IP address 192.168.100.X where X could be any number of 2-99. Click a field of Subnet mask, the subnet address should be created automatically.

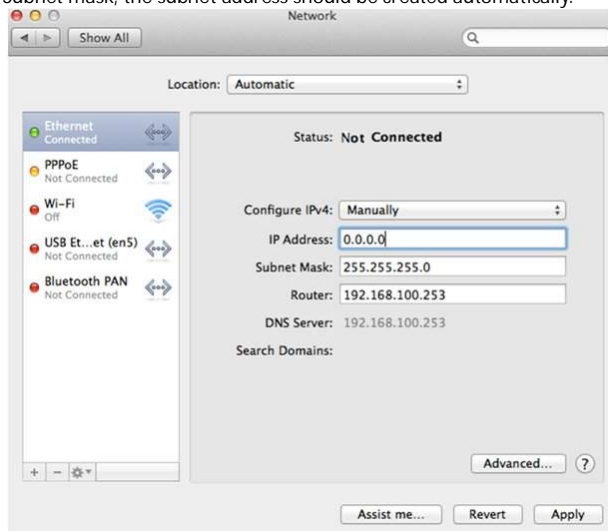

f. Click Apply to finish the configuration.

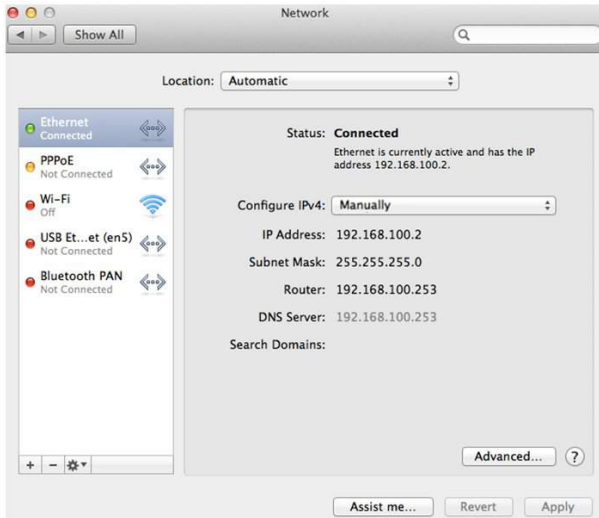

- g. Open Internet Explorer and enter <http://192.168.100.253> to follow the repeater mode settings as described in the Repeat mode setting section.
- h. After set up close Internet Explorer.
- i. Repeat steps c to e above. In the Configure IPv4 pop-up menu, select Using DHCP. Click Apply and close the windows. The repeater mode should be able to set up.

Repeater mode setting

Follows the steps below to configure the repeater.

1. In the login window displayed below, enter the user name and password printed on the bottom label.



2. Click Login to enter the configuration page.
3. Click Setup Wizard in the navigation bar on the left pane of the page, select Wireless Universal Repeater Mode and click Next.

Setup Wizard

Step1: There are two modes to expand your wireless network of the Repeater Mode. You can choose anyone of WDS Mode or Wireless Universal Repeater Mode.

Please choose your repeater mode as follows:

- WDS Mode
- Wireless Universal Repeater Mode

Next

4. Click Site Survey to search for the wireless network you want to connect. Select a desired network and click Next.

Setup Wizard

Step2: Please configure the wireless client first. Click "Site Survey" button to survey wireless sites when client mode is enabled. If any Access Point or IBSS is found, the results will be displayed in the Site Survey List three seconds later, you could select anyone to connect it manually. Then click "Next".

Site Survey

Number of Sites Scanned:32

#	SSID	BSSID	Channel	Signal	Encrypt	Select
1	TW-2B08	00:1F:A4:91:2A:50	10	100%	WPA-PSK(AES/TKIP)/ WPA2-PSK(AES/TKIP)	<input checked="" type="radio"/>
2	Zoltrix_ZW919	00:28:12:34:56:78	1	100%	None	<input type="radio"/>
3	SMC	00:1F:A4:90:87:50	3	100%	WPA-PSK(AES/TKIP)/ WPA2-PSK(AES/TKIP)	<input type="radio"/>

Back Next

5. Select a wireless Client Security option and then input a pass code. Click Next.

Setup Wizard

Step3: You should configure your wireless client manually so it has the same wireless security settings as the network which you selected. Then click "Next".

Wireless Client Security Options

Wireless Client Security Options : WPA2-PSK[AES] ▼

Security Options(WPA2-PSK)

PassPhrase : (8-63 characters or 64 hex digits)

Back Next

6. Deselect Synchronize Wireless Universal Repeater's and Uplink repeater's SSID and Security Options and then select a security option.
Click Finish to complete setup wizard.

Setup Wizard

Step4: This page provides an easy way to configure wireless universal repeater. If you enable the function, your wireless universal repeater would use same SSID and security options with uplink AP, or you should configure SSID of Extended Interface and Security Options manually. Finally click "Finish".

Wireless Universal Repeater Settings

Synchronize Wireless Universal Repeater's And Uplink AP's SSID And Security Options

SSID of Extended Interface :

ITWORKS

Security Options :

none

Note: If you changed settings of wireless universal repeater, the wireless clients connecting to your wireless universal repeater need connect to wireless universal repeater with new SSID and security options again.

Back

Finish

Cancel

Mac OS (European
French)



Répéteur sans fil 300 Mbps

Modèle: REPW300



Guide rapide d'installation

1 Contenu de l'emballage

- 1 répéteur sans fil de 300 Mbps
- 1 câble réseau
- 1 x MODE D'EMPLOI (CD)

2 Introduction au mode et connexion

Mode répéteur


Il est recommandé d'utiliser le Mode répéteur. En mode répéteur, le répéteur étend la couverture sans fil des autres répéteurs ou routeurs sans fil existants. Les ordinateurs peuvent se connecter à l'appareil avec ou sans fil.



From the top down:
MODE RÉPÉTEUR
INTERNET
Routeur sans fil


Appareils avec fonction Wi-Fi

Pour configurer le mode répéteur:

- Branchez le répéteur. Reliez le répéteur à un ordinateur à l'aide du câble réseau fourni.
- Mettez le bouton Client/Repeater/AP sur Repeater (répéteur).
- Cliquez sur l'icône  en haut à gauche pour lancer le menu. Cliquez sur Préférences système pour accéder au menu des préférences système.




d. Cliquez sur l'icône Réseau pour accéder au menu réseau.

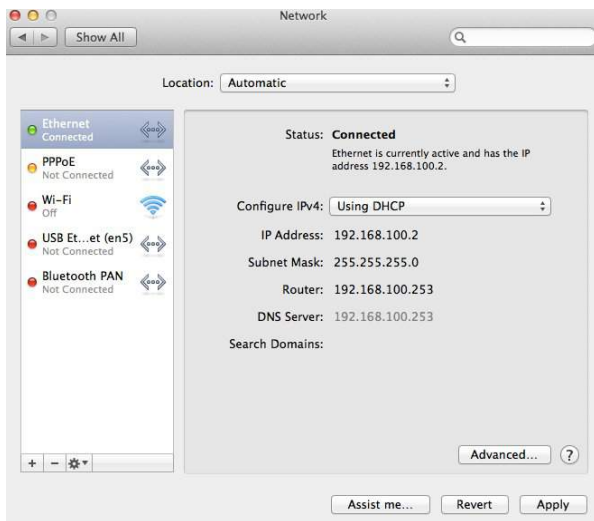


La connexion filaire automatique par défaut est Ethernet DHCP. Si le DHCP est activé, vous pouvez utiliser cette connexion sans configurer l'adresse IP. Si le DHCP est désactivé, vous devrez configurer l'adresse IP manuellement.

e. Tapez l'adresse IP 192.168.100.X (X étant n'importe quel nombre de 2 à 99). Cliquez sur le champ d'un masque de sous-réseau; l'adresse de sous-réseau devrait être créée automatiquement.

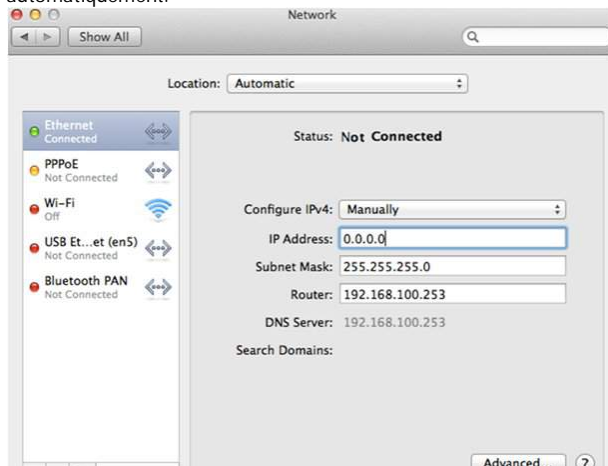

f. Cliquez sur Appliquer pour terminer la configuration.

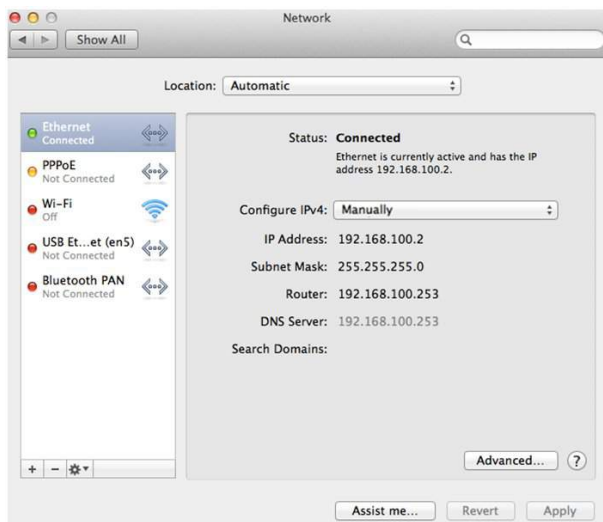

g. Ouvrez Internet Explorer, allez à l'adresse <http://192.168.100.253> et suivez les indications de la section Réglages du mode répéteur.

h. Une fois la configuration terminée, refermez Internet Explorer.

i. Répétez les étapes c à e ci-dessus. Dans le menu contextuel Configuration IPv4, allez dans Utiliser DHCP. Cliquez sur Appliquer et refermez les fenêtres. Le mode répéteur devrait maintenant être configuré.

Réglage du mode de répétition

Pour configurer le répéteur, procédez de la manière suivante.

1. Dans la fenêtre d'ouverture de session ci-dessous, tapez le nom d'utilisateur et le mot de passe imprimés sur l'étiquette en-dessous.



2. Cliquez sur Login pour passer à la page de configuration.
3. Dans la partie gauche de la barre de navigation, cliquez sur Assistant de configuration; sélectionnez Mode répéteur sans fil universel et cliquez sur Suivant.

Setup Wizard

Step1: There are two modes to expand your wireless network of the Repeater Mode. You can choose anyone of WDS Mode or Wireless Universal Repeater Mode.

Please choose your repeater mode as follows:

- WDS Mode
- Wireless Universal Repeater Mode

Next

4. Cliquez sur Étude de sites pour rechercher le réseau sans fil auquel vous souhaitez vous connecter. Choisissez un réseau et cliquez sur Suivant.

Setup Wizard

Step2: Please configure the wireless client first. Click "Site Survey" button to survey wireless sites when client mode is enabled. If any Access Point or IBSS is found, the results will be displayed in the Site Survey List three seconds later, you could select anyone to connect it manually. Then click "Next".

Site Survey

Number of Sites Scanned:32

Site Survey List

#	SSID	BSSID	Channel	Signal	Encrypt	Select
1	TW-2B08	00:1F:A4:91:2A:50	10	100%	WPA-PSK(AES/TKIP)/ WPA2-PSK(AES/TKIP)	<input checked="" type="radio"/>
2	Zoltrix_ZW919	00:28:12:34:56:78	1	100%	None	<input type="radio"/>
3	SMC	00:1F:A4:90:87:50	3	100%	WPA-PSK(AES/TKIP)/ WPA2-PSK(AES/TKIP)	<input type="radio"/>

Back Next

5. Choisissez une option de sécurité de client sans fil, puis définissez un mot de passe. Cliquez sur Suivant.

Setup Wizard

Step3: You should configure your wireless client manually so it has the same wireless security settings as the network which you selected. Then click "Next".

Wireless Client Security Options

Wireless Client Security Options : WPA2-PSK[AES] ▼

Security Options(WPA2-PSK)

6. Désélectionnez Synchroniser le SSID et les options de sécurité du répéteur sans fil universel et du répéteur de liaison montante, puis sélectionnez une option de sécurité.
Cliquez sur Terminer pour refermer l'assistant de configuration.

Setup Wizard

Step4: This page provides an easy way to configure wireless universal repeater. If you enable the function, your wireless universal repeater would use same SSID and security options with uplink AP, or you should configure SSID of Extended Interface and Security Options manually. Finally click "Finish".

Wireless Universal Repeater Settings	
<input type="checkbox"/> Synchronize Wireless Universal Repeater's And Uplink AP's SSID And Security Options	
SSID of Extended Interface :	<input type="text" value="ITWORKS"/>
Security Options :	<input type="text" value="none"/>
Note: If you changed settings of wireless universal repeater, the wireless clients connecting to your wireless universal repeater need connect to wireless universal repeater with new SSID and security options again.	
<input type="button" value="Back"/> <input type="button" value="Finish"/> <input type="button" value="Cancel"/>	

Mac OS (DUTCH)



300 Mbps draadloze repeater

Model: REPW300



Gids voor een snelle installatie


1 Paklijst

- 1 x 300 Mbps draadloze repeater
- 1 x netwerkkabel
- 1 x HANDLEIDING (CD)


2 Inleiding over modi en verbinding

Repeater-modus

Het is aanbevolen de Repeater-modus te gebruiken. In de Repeater-modus breidt de repeater de draadloze dekking van een andere, bestaande repeater of een draadloze router uit. Computers kunnen met of zonder kabel op het apparaat worden aangesloten.

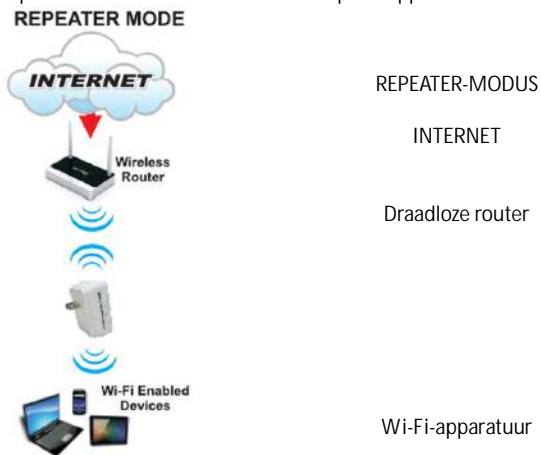


Om de repeater-modus in te stellen:

- Sluit de repeater aan op een stopcontact. Sluit de repeater aan op een computer met behulp van de meegeleverde netwerkkabel.
- Schakel de knop Cliënt/Repeater/AP naar Repeater.
- Klik op het icoon  in de linkerbovenhoek om het menu te openen. Klik op Systeemvoorkeuren om het venster van de Systeemvoorkeuren te openen.




d. Klik op het icon van de Netwerken om het venster van de netwerken te openen.

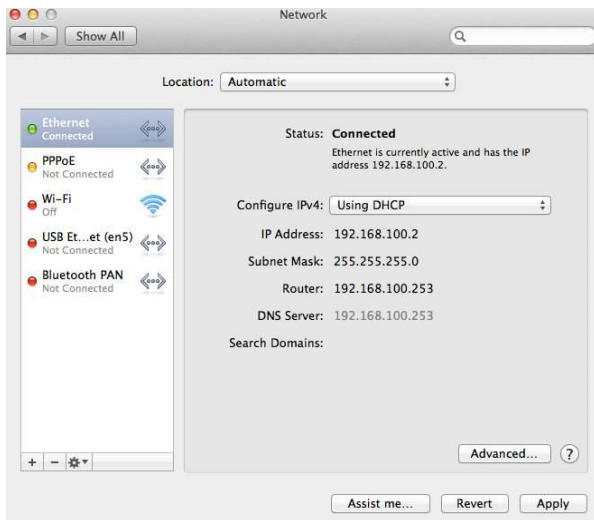


Ethernet DHCP is de standard automatisch bekabelde verbinding. Als DHCP is ingeschakeld kunt u deze verbinding gebruiken zonder configuratie van het IP-adres. Als DHCP is uitgeschakeld moet u IP-adres handmatig configureren.

e. Voer het IP-adres 192.168.100.X in, waarbij X een cijfer van 2-99 kan zijn. Klik op een veld van een Subnetmask, het subnet-adres zou automatisch gegenereerd moeten worden.

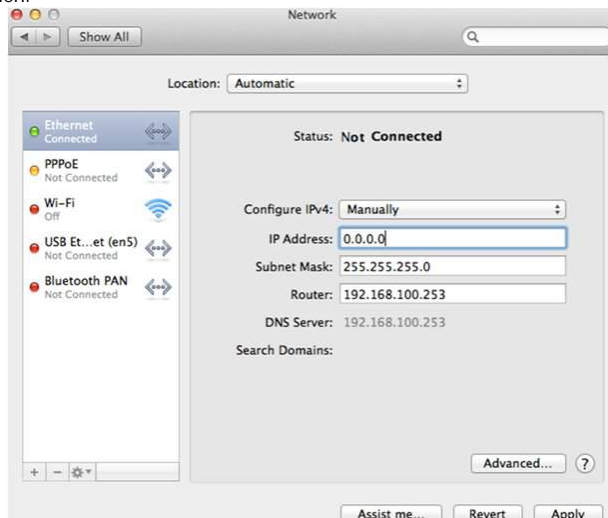

f. Klik op Toepassen om de configuratie te voltooien.

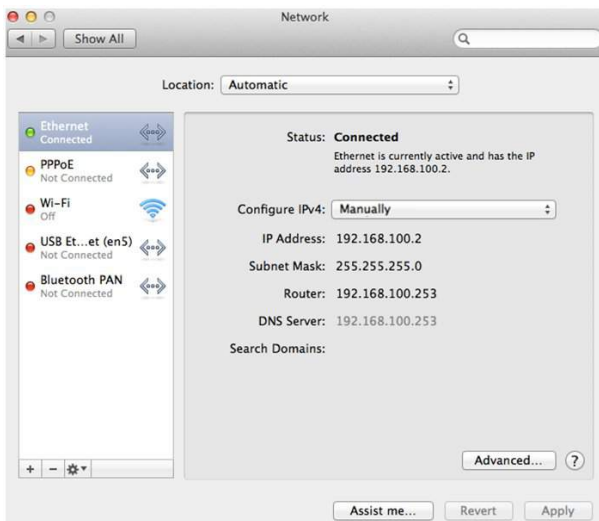

g. Open Internet Explorer en voer <http://192.168.100.253> in om de instellingen van de repeater-modus te volgen, als beschreven in de paragraaf Instellen van de repeat-modus.

h. Sluit Internet Explorer als de instelling is voltooid.

i. Herhaal de bovenstaande stappen c tot e. Selecteer Gebruik DHCP in het pop-upmenu Configureer IPv4. Klik op Toepassen en sluit de vensters. De repeater-modus kan nu worden ingesteld.

De repeater-modus instellen

Volg de onderstaande stappen om de repeater te configureren.

1. Voer als hieronder getoond in het aanmeldvenster de gebruikersnaam en het paswoord in die u vindt op het typeplaatje op de onderzijde.

2. Klik op Aanmelden om de configuratiepagina binnen te gaan.
3. Klik op Instel-wizard in de navigatiebalk op het linkerpaneel van de pagina, selecteer Draadloze universele repeater-modus en klik op Volgende.

Setup Wizard

Step1: There are two modes to expand your wireless network of the Repeater Mode. You can choose anyone of WDS Mode or Wireless Universal Repeater Mode.

Please choose your repeater mode as follows:

- WDS Mode
 Wireless Universal Repeater Mode

Next

4. Klik op Site survey om te zoeken naar het draadloze netwerk waarmee u wilt verbinden. Selecteer het gewenste netwerk en klik op Volgende.

Setup Wizard

Step2: Please configure the wireless client first. Click "Site Survey" button to survey wireless sites when client mode is enabled. If any Access Point or IBSS is found, the results will be displayed in the Site Survey List three seconds later, you could select anyone to connect it manually. Then click "Next".

Site Survey

Number of Sites Scanned:32

Site Survey List

#	SSID	BSSID	Channel	Signal	Encrypt	Select
1	TW-2B08	00:1F:A4:91:2A:60	10	100%	WPA-PSK(AES/TKIP)/ WPA2-PSK(AES/TKIP)	<input checked="" type="radio"/>
2	Zoltrix_ZW919	00:28:12:34:56:78	1	100%	None	<input type="radio"/>
3	SMC	00:1F:A4:90:87:50	3	100%	WPA-PSK(AES/TKIP)/ WPA2-PSK(AES/TKIP)	<input type="radio"/>

Back Next

5. Selecteer een beveiligingsoptie voor de draadloze cliënt en voer dan een wachtwoord in. Klik op Volgende.

Setup Wizard

Step3: You should configure your wireless client manually so it has the same wireless security settings as the network which you selected. Then click "Next".

Wireless Client Security Options

Wireless Client Security Options : WPA2-PSK(AES) ▼

Security Options(WPA2-PSK)

6. Deselecteer Synchroniseer opties van de draadloze universele repeater en uplink SSID en beveiligingsoptie van repeater en selecteer dan een beveiligingsoptie. Klik op Voltooien om de instel-wizard te verlaten.

Setup Wizard

Step4: This page provides an easy way to configure wireless universal repeater. If you enable the function, your wireless universal repeater would use same SSID and security options with uplink AP, or you should configure SSID of Extended Interface and Security Options manually. Finally click "Finish".

Wireless Universal Repeater Settings	
<input type="checkbox"/> Synchronize Wireless Universal Repeater's And Uplink AP's SSID And Security Options	
SSID of Extended Interface :	<input type="text" value="ITWORKS"/>
Security Options :	<input type="text" value="none"/>
Note: If you changed settings of wireless universal repeater, the wireless clients connecting to your wireless universal repeater need connect to wireless universal repeater with new SSID and security options again.	